

INSTALLATION INSTRUCTIONS

DESCRIPTION: Center Mirror Kit
PART NUMBER: BAS-F6206-V0
MODEL: Side-by-Side



⚠ WARNING

Please read and understand these instructions completely before installation to avoid possible injury, or damage to the accessory or vehicle.

This installation requires a torque wrench and should be performed by an authorized Yamaha dealer or other qualified technician.

WARRANTY INFORMATION:

In the U.S., see your Yamaha dealer for a copy of the Yamaha Genuine Parts and Accessories limited warranty statement.


DEALER OR INSTALLER:


These instructions contain important information for future reference and *must* be given to the customer.

NOTE: This mirror kit **REQUIRES** the use of either the Bracket Mount Kit (BAS-F621H-V0) **OR** the Clamp Mount Kit (BAS-K7135-V0). See the pictures at the bottom of this page to determine which mount kit is needed.

PARTS LIST:

No.	Part Number	Description	Qty
--	BAS-F6291-V0	Center Mirror	--
①	BAS-F628A-V0	Mirror Body	1
②	BAS-F384J-V0	Ball Stud	1
③	BAS-F464R-V0	Compression Plate	1
④	92017-04008	Compression Plate Bolt	3
ALL COMPONENTS BELOW SOLD SEPARATELY – SEE NOTE ABOVE			
No.	Part Number	Description	Qty
--	BAS-F621H-V0	Bracket Mount Kit	--
⑤	BAS-K7722-00	Bracket Mount	1
⑥	90149-08805	Bracket Bolt	2
No.	Part Number	Description	Qty
--	BAS-K7135-V0	Clamp Mount Kit	--
⑦	BAS-F2911-V0	Clamp Body	1
⑧	BAS-K7973-V0	Clamp Band	1
⑨	95885-06045	Clamp Bolt	1
⑩	90179-06X00	Clamp Nut	1

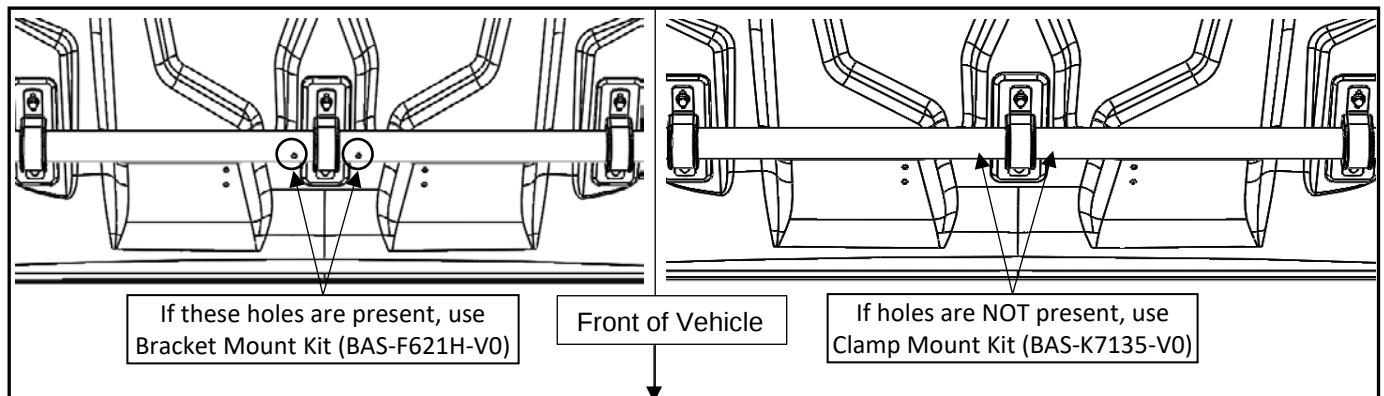

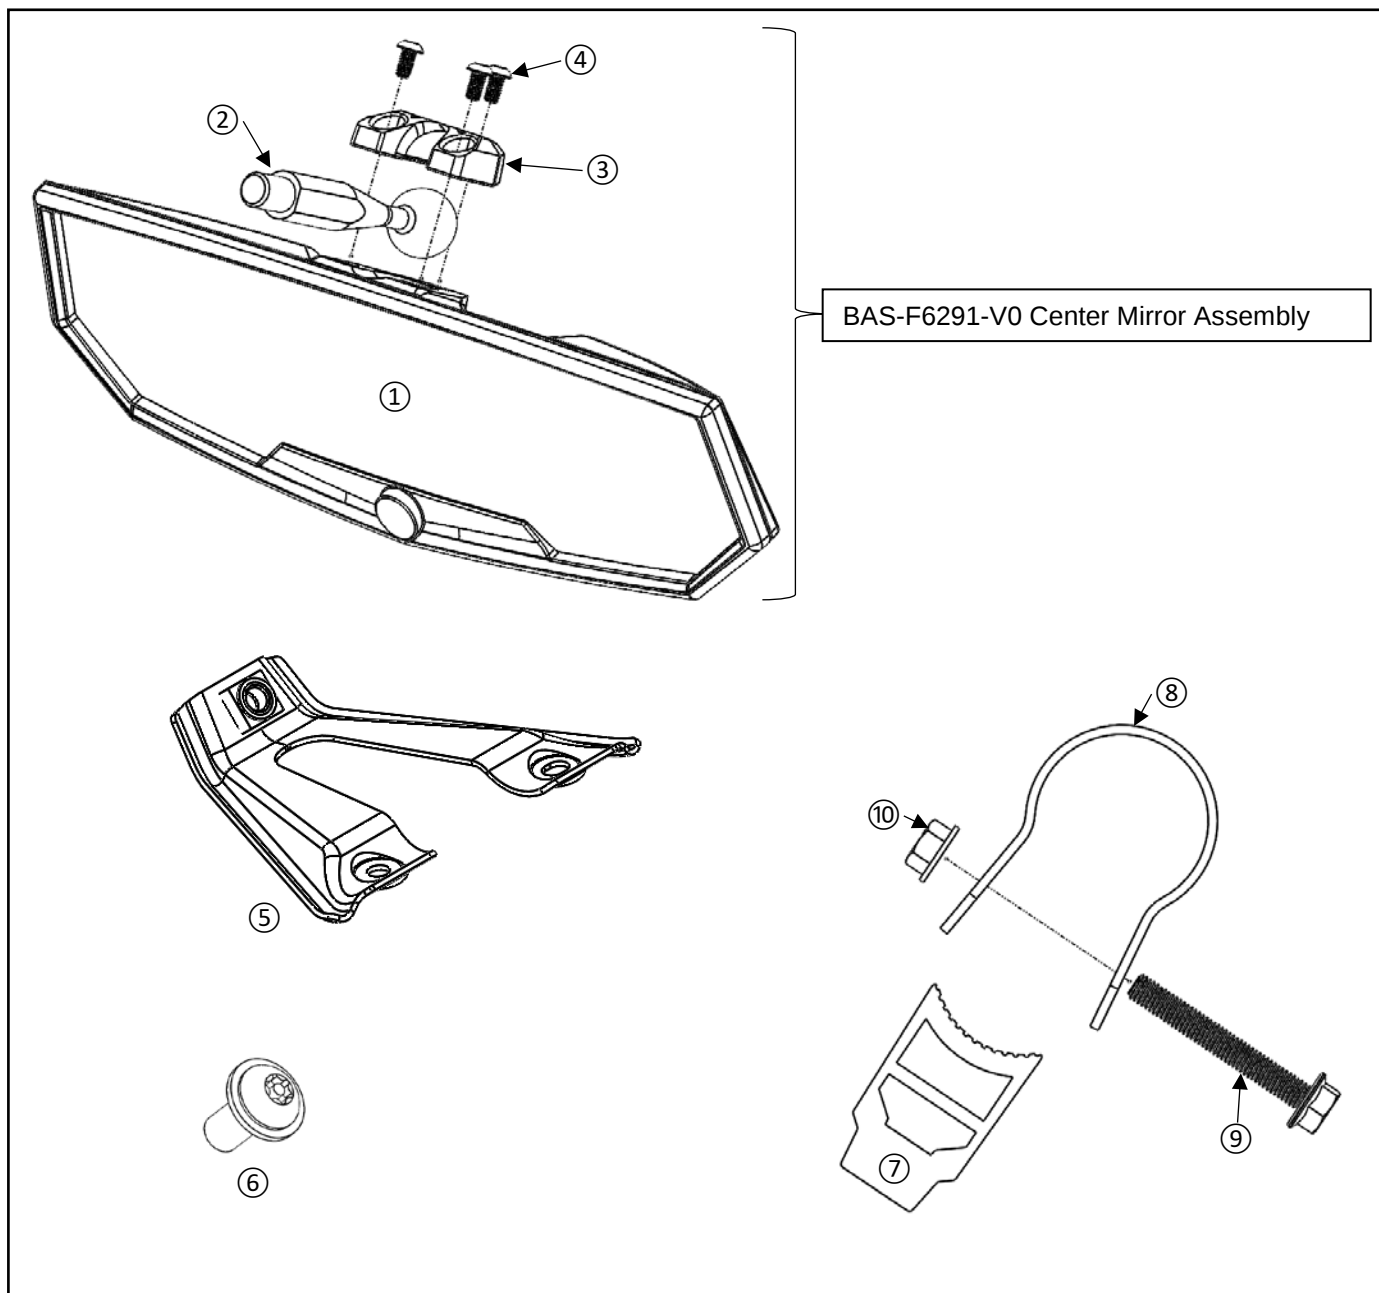

PREPARATION:

- Place the vehicle on a secure and level surface.
- Set the parking brake.
- Clean the mount surfaces before starting installation.

MAINTENANCE:

Periodically check the bolts and/or nut for tightness.

CARE AND CLEANING:


Clean all mounting surfaces before installation.
Gently wipe parts with damp cloth when needed.

CUSTOMER SERVICE:

For further information see your Yamaha dealer.

ESTIMATED TIME TO INSTALL: 0.5 HRS

Fig. 1

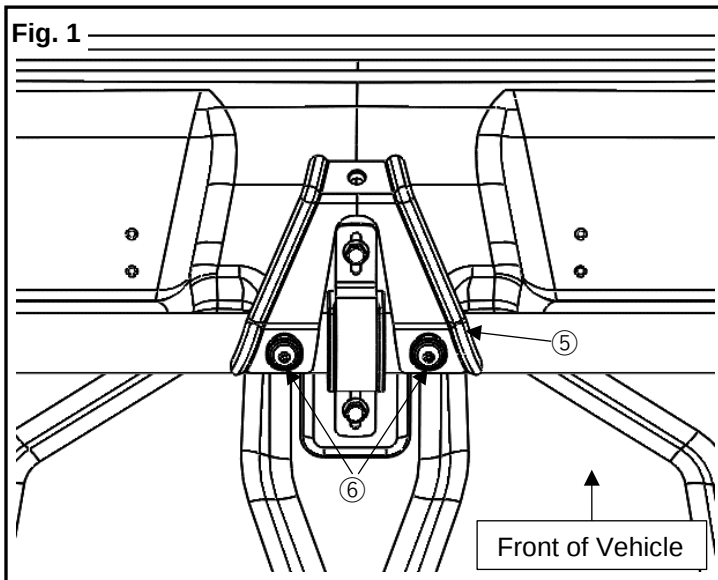

1. Install the Mirror to the (5) Bracket Mount or (7) Clamp Body. **Note: Turn the mirror by the (2) Ball Stud, NOT the (1) Mirror Body to avoid damage to the mirror.**

BRACKET MOUNT INSTRUCTIONS:

2. Use (6) Bracket Bolts to attach the (5) Bracket Mount as shown in Fig 1. **NOTE: The (6) Bracket Bolts are thread-forming fasteners and will take some effort to install for the first time.**
3. Torque the (6) Bracket Bolts to 15 Nm (11 lb-ft).

CLAMP MOUNT INSTRUCTIONS:

4. Push the (8) Clamp Band over the ROPS tube near the center of the vehicle.
5. Hold the (7) Clamp Body up to the ROPS tube, align and insert the (9) Clamp Bolt through the band and body. Torque the (10) Clamp Nut to 8 Nm (5.9 lb-ft). See Fig 2.

CENTER MIRROR INSTRUCTIONS:

6. Torque the (2) Ball Stud to 15-19 Nm (11-14 lb-ft).
7. Adjust the mirror by hand as needed. Torque the (4) Compression Plate Bolts to 1.5 Nm (13.3 lb-in) as needed in the sequence shown in Fig 3.

Fig. 2

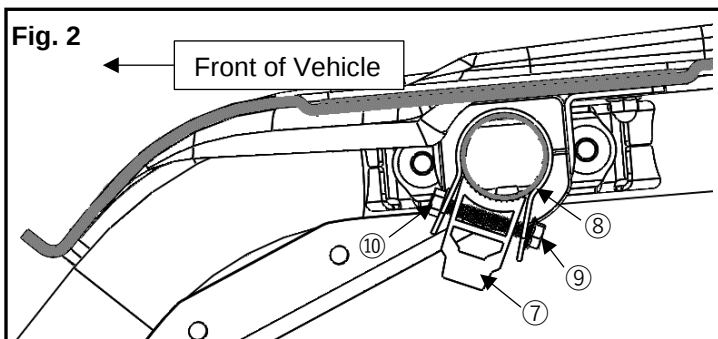


Fig. 3

