

INSTALLATION INSTRUCTIONS

DESCRIPTION: SPARE TIRE MOUNT KIT

PART NUMBER: B4M-K75J0-V0

MODEL: 2019 + Wolverine X2 and 2021+ Wolverine RMax2



⚠ WARNING

Please read and understand these instructions completely before installation to avoid possible injury, or damage to the accessory or vehicle.

NOTICE:

Installation of this kit requires a torque wrench and should be performed by an authorized Yamaha dealer or a qualified mechanic.

WARRANTY INFORMATION:

In the United States, see your Yamaha dealer for a copy of the Yamaha Genuine parts and Accessories Limited Warranty.


DEALER OR INSTALLER:




These instructions contain important information for future reference and *must* be given to the customer.

PARTS LIST:

No.	Part Number	Description	Qty
--	B4M-K75J0-V0	SPARE TIRE MOUNT KIT	-
①	*	Tire Carrier	1
②	*	Ratchet Strap	1
③	95812-06035	M6x35mm Flanged Hex Bolt	6
④	95812-08035	M8x35mm Flanged Hex Bolt	2
⑤	95702-08500	M8 Flanged Nut	2
⑥	B8K-F8467-V0	M6 Spacer	6
⑦	B8K-F8467-T0	M8 Spacer	2
⑧	95812-10090	M10x90mm Flanged Hex Bolt	1
⑨	95602-10200	M10 Nylon Locking Nut	1

* Part supplied with kit only and not available separately.

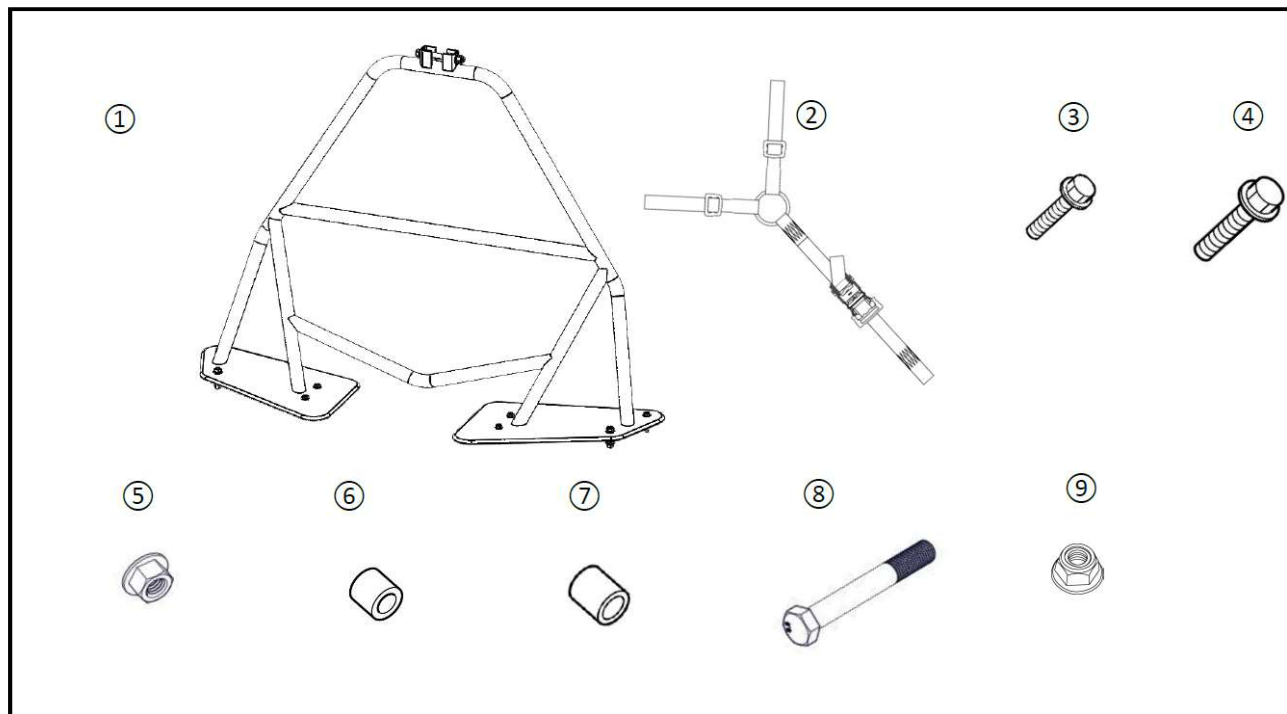

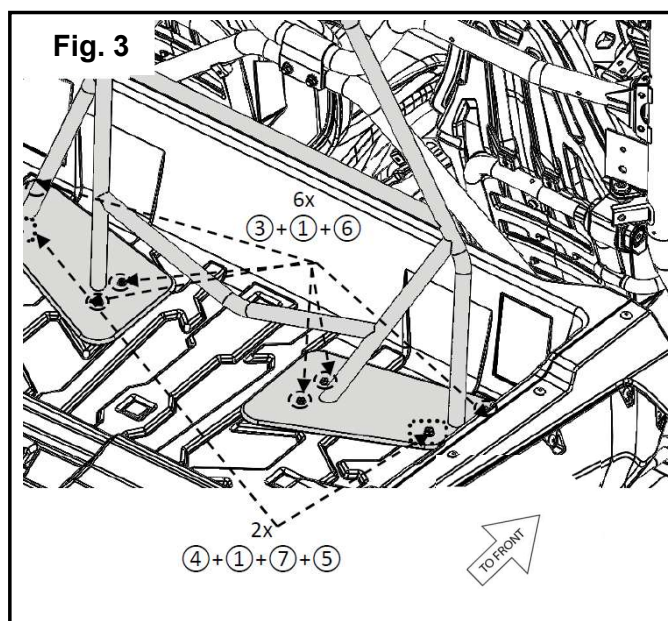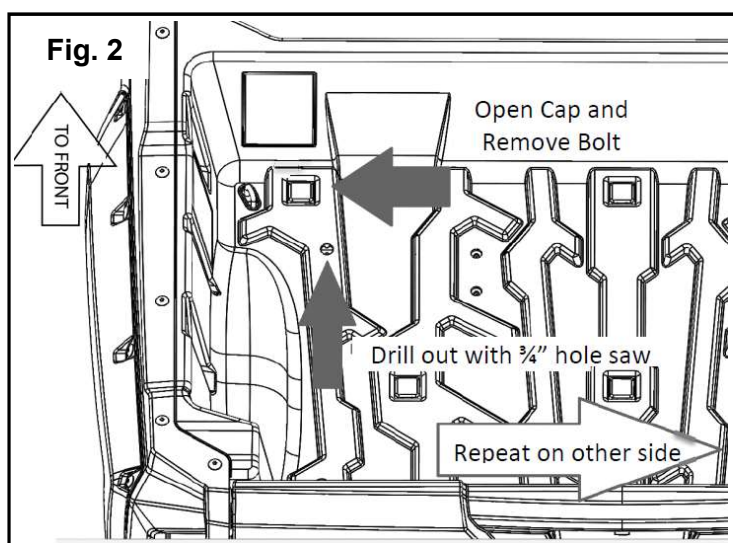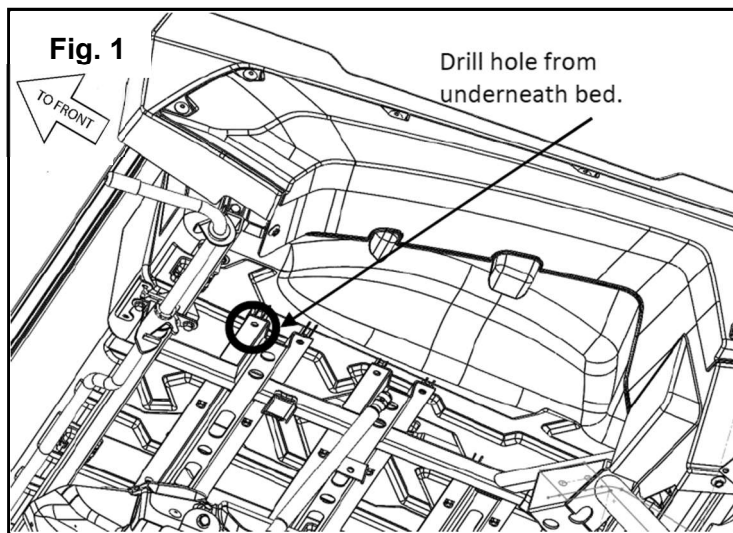

PREPARATION:

- Place the vehicle on a secure and level surface.
- Set the parking brake.
- Clean the mount surfaces before beginning installation.

INSTALLATION:

1. On the drivers side, locate the structural brace underneath the bed and in the first hole on the left side. Drill a pilot hole with a 1/8 - inch drill bit. (Fig. 1)

Note: The bed can tilt to allow more access for the drilling of the pilot holes.

2. Lower the bed and lock it in place. Inside the bed, use the pilot hole to locate and drill a 3/4 - inch hole into the bed to access the structural brace.

Warning: Do not sit or stand in the bed for this step.

3. Remove the two plastic caps and bolts. They will not be reused. (Fig. 2)
4. Repeat Steps 1 and 2 on the passenger side of the vehicle.
5. Place a single ⑦ M8 Spacer in each of the 3/4 - inch holes that were drilled earlier.
6. Place six ⑥ M6 Spacers over the smaller hole locations in the bed. (Fig. 3)
7. Set the ① Tire Carrier in the bed and align the mount base of the tire carrier over the ⑥ M6 Spacers and threaded holes. (Fig. 3)
8. Install six ③ M6 x 35mm Flanged Hex bolts into the mount base over the locations for the ⑥ M6 spacers. Tighten to 8 Nm (0.8 kg-m or 5.9 lb-ft).
9. Install the two ④ M8 x 35mm Flanged Hex Bolts into the 3/4 - inch holes and thru the ⑦ M8 Spacers into the structural brace under the bed.
10. Thread the ⑤ M8 Flanged Nuts onto the ④ M8 x 35mm Flanged Hex Bolts and tighten to 30Nm (3.0 kg-m or 22.1 lb-ft)
11. Attach the ② Ratchet Strap to the top of the ① Tire Carrier with the ⑧ M10 x 90mm Flanged Hex Bolt and ⑨ M10 Nylon Locking Nut and torque to 30 Nm (3.0 kg-m or 22.1 lb-ft). (Fig 6)
12. Attach the ② Ratchet Strap buckle ends to the ① Tire Carrier. (Fig 4 and 5)
13. Figures 6 and 7 show how a spare tire looks when it is installed into the ① Tire Carrier.

Fig. 4

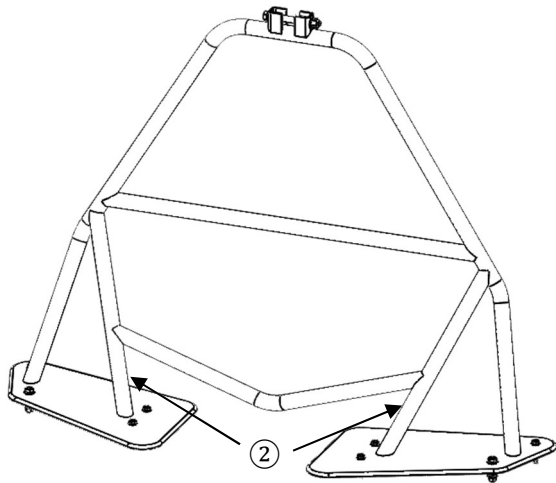


Fig. 5

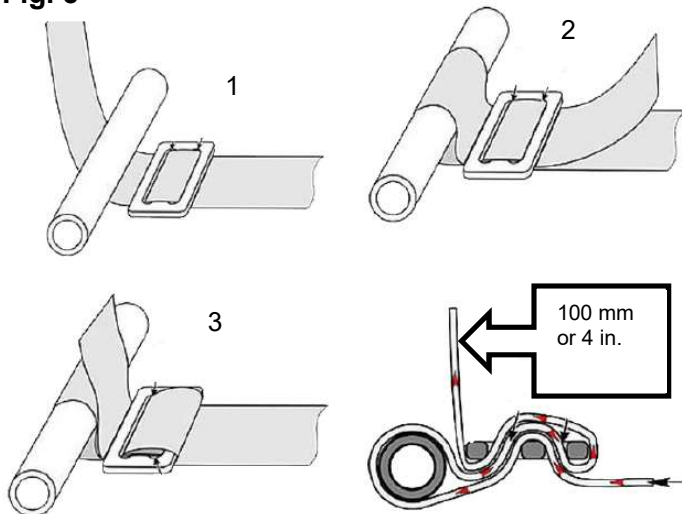


Fig. 6

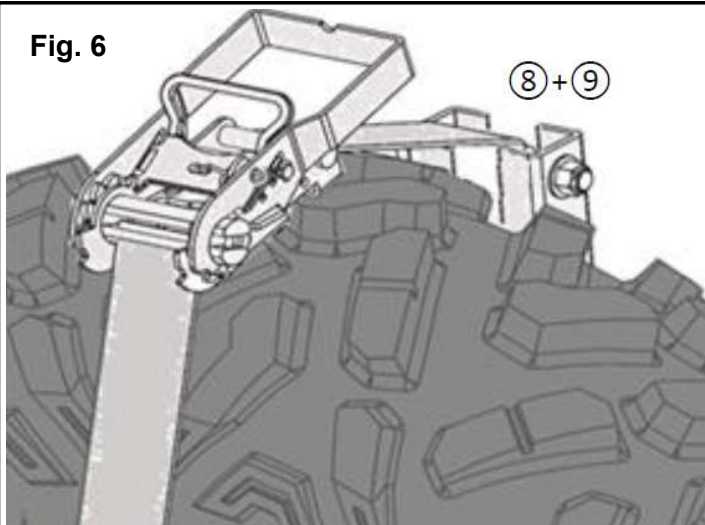


Fig. 7



MAINTENANCE:

Periodically, check torque on all hardware. If loose hardware is found, re-torque to specification.

CARE AND CLEANING:

Clean painted metal parts with a clean soft cloth and mild soap and water solution. Rinse and dry.

CUSTOMER SERVICE:

For further information see your Yamaha dealer.

ESTIMATED TIME TO INSTALL: 0.6 HRS.