

INSTALLATION INSTRUCTIONS

DESCRIPTION: Front Brush Guard Kit
PART NUMBER: BAR-F84L0-V0
MODEL: '20~ Wolverine X4, X2



⚠ WARNING

Please read and understand these instructions completely before installation to avoid possible injury, or damage to the accessory or vehicle.

NOTICE:

Installation of this kit requires a torque wrench and should be performed by an authorized Yamaha dealer or a qualified mechanic.

WARRANTY INFORMATION:

In the United States, see your Yamaha dealer for a copy of the Yamaha Genuine Parts and Accessories Limited Warranty.

DEALER OR INSTALLER:

These instructions contain important information for future reference and *must* be given to the customer.

PARTS LIST:

* Part supplied with kit only and not available separately

No.	Part Number	Description	Qty
--	BAR-F84L0-V0	Front Brush Guard Kit	--
①	*	Front Brush Guard	1
②	95814-10020	Flange Bolt	3

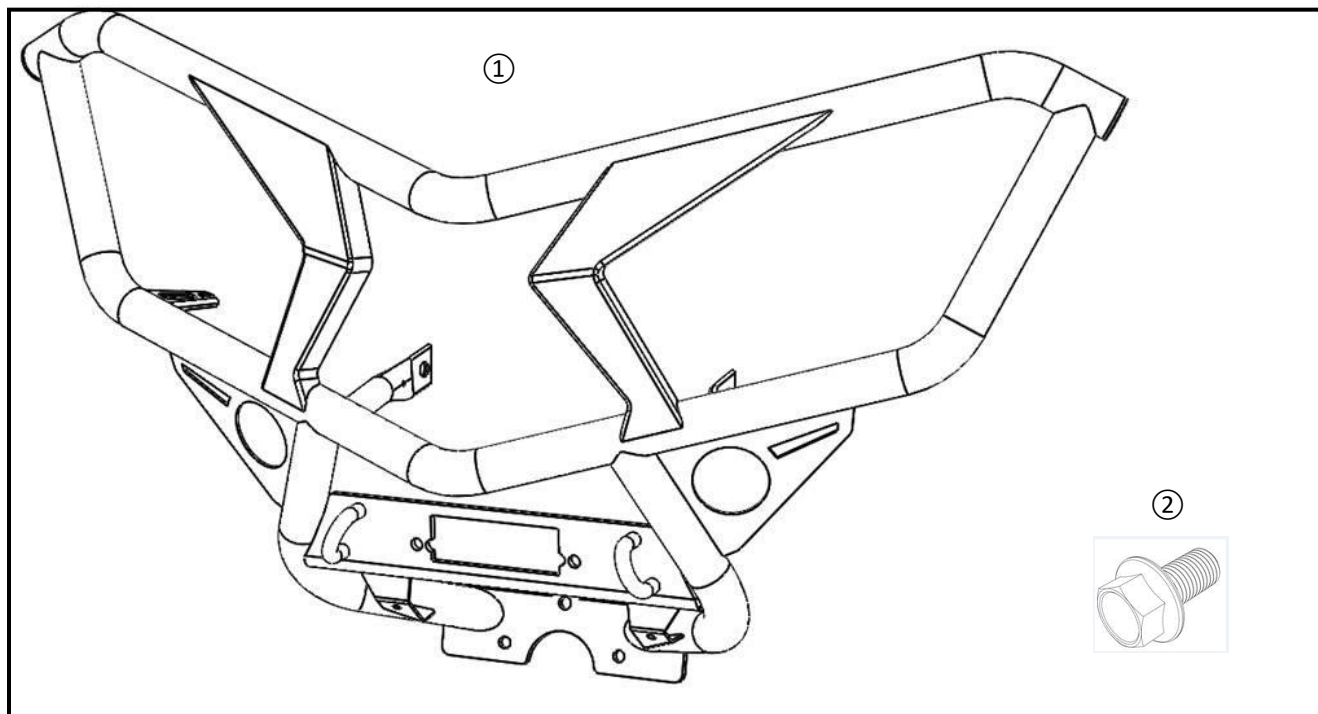


Fig. 1

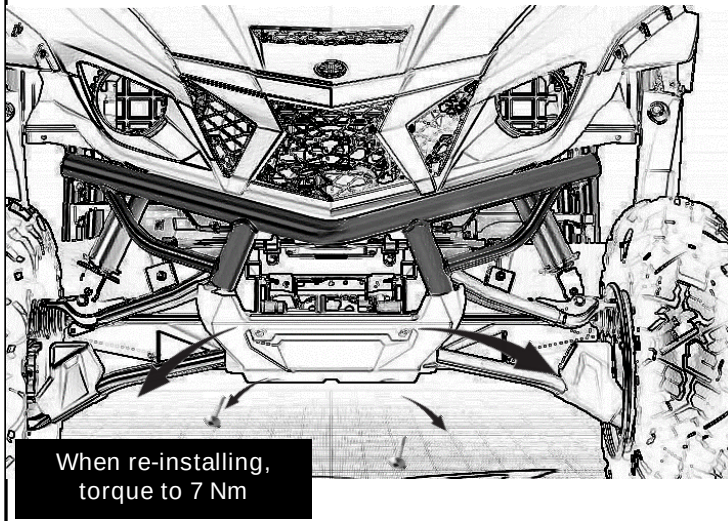


Fig. 2


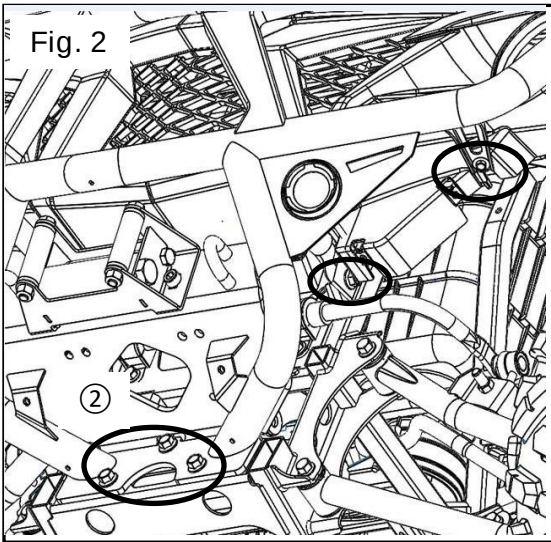


Fig. 3

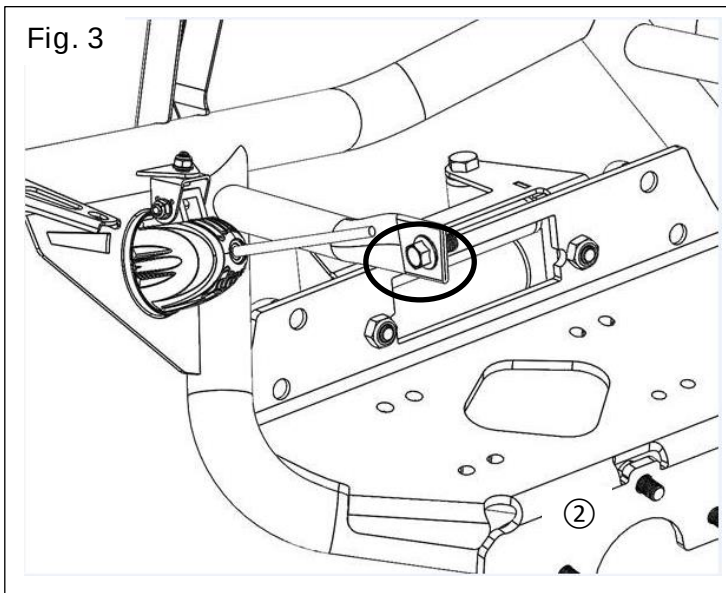

PREPARATION:

- Place the vehicle on a secure and level surface. Set the parking brake. Clean the mount surfaces before beginning installation.

INSTALLATION:

1. Remove 4 bolts that secure the plastic front bash plate to the vehicle. Retain all parts for reuse.
2. Remove the bolts holding the stock front bar to the vehicle frame. Note the locations of the mounting bolts. There are 2 upper frame bolts, 3 lower frame bolts and 2 fender bolts. Retain these bolts for reuse as needed. The lower frame bolts will not be reused.(Fig. 2)
3. Remove the stock front bar. It will not be reused.
4. Align/Install the new Brush Guard ① to the front of the vehicle and insert the 3 ② Flange bolts from the kit into the lower frame holes.
5. Insert the upper bolts from the stock front bar into the stock mounting locations in the frame.(Fig. 3)
6. Insert the smaller fender bolts to the upper corners of the Brush Guard ①. (Fig.2)
7. Once all the hardware is installed. Torque the 3 lower mount bolts ② to 48-58 Nm (5.9 m-kg, 42.7 ft-lb maximum) as shown in (Fig. 2).
8. Torque the 2 upper mount bolts to 48-58 Nm (5.9 kg-m, 42.7 ft-lb maximum) as shown in (Fig. 2).
9. Torque the 2 upper fender mount bolts to 5-8 Nm (0.8 kg-m, 5.9 ft-lb maximum) as shown in (Fig. 2).
10. Install the stock front bash plate to the mounting points using the stock bolts. Torque the bolts to 7 Nm (0.7 kg-m, 5.1 ft-lb). Refer to (Fig. 1).

MAINTENANCE:

Periodically, check torque on all hardware. If loose hardware is found, re-torque to specification.

CARE AND CLEANING:

Clean painted metal parts with a clean soft cloth and mild soap and water solution. Rinse and dry.

CUSTOMER SERVICE:

For further information see your Yamaha dealer.

COMPATIBILITY: This brush guard is compatible with the VRX and Axon series of winches. This brush guard also accepts pod spot lights (2HC-H4104-V0-00) and pod flood lights (2HC-H4104-L0-00) (Fig. 3)

ESTIMATED TIME TO INSTALL: 1.0 HRS.