

INSTALLATION INSTRUCTIONS

DESCRIPTION: Bar Mount Kit
PART NUMBER: 2MB-F34A0-V0
MODEL: Wolverine



⚠ WARNING

Please read and understand these instructions completely before installation to avoid possible injury, or damage to the accessory or vehicle.

NOTICE:

This installation requires a torque wrench and should be performed by an authorized Yamaha dealer or other qualified technician.

WARRANTY INFORMATION:

Genuine Yamaha Accessories are covered by a one-year limited warranty against defects in material or workmanship. Labor for replacement of defective components is not covered. See your Yamaha dealer for a copy of the warranty statement.

DEALER OR INSTALLER:

These instructions contain important information for future reference and *must* be given to the customer.

PARTS LIST:

No.	Part Number	Description	Qty
--	2MB-F34A0-V0	Bar Mount Kit	--
①	*	Bar Mount Base	1
②	*	Collar	2
③	*	M6 x 16mm Hex Head Flange Bolt	4
④	*	M6 x 25mm Hex Head Flange Bolt	2
⑤	*	Weld Nut Strap	2

* Part supplied with kit only and not available separately.


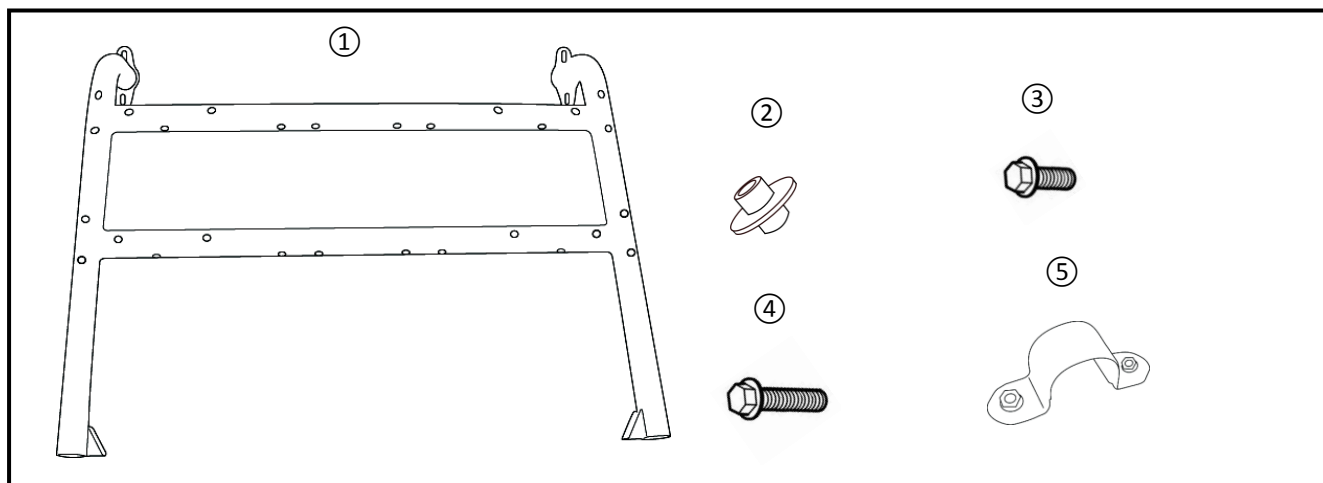


Fig. 1

STD BOLT COVERS AND BOLTS

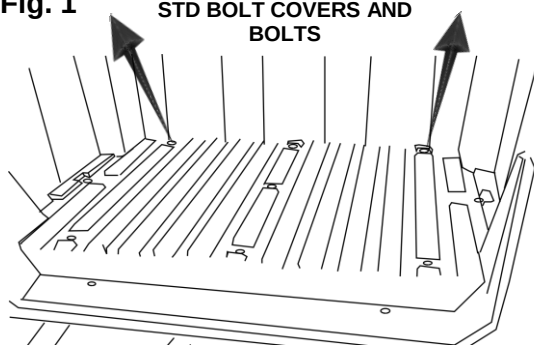


PREPARATION:

- Place the vehicle on a secure and level surface.
- Set the parking brake.
- Clean the mount surfaces before starting installation.

INSTALLATION:


- Remove the two bolts from the bed as shown in Fig. 1. The bolts will not be reused.

Fig. 2

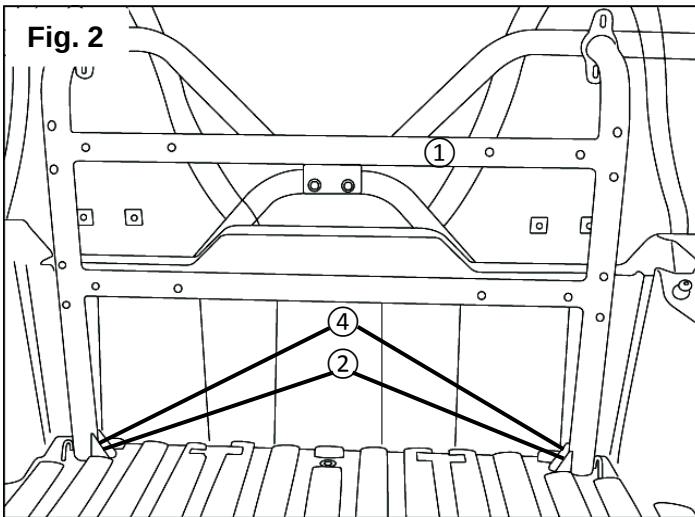

2. Place a collar (2) in the 2 mounting hole locations. Put the Bar Mount Base (1) in place in the bed. Install the two M6 x 25mm Flange Bolts (4):
 - through the holes in the Bar Mount Base (1),
 - through the Collars (2), and
 - into the threads in the bed.See Fig 2.
3. Hand tighten the two M6 x 25mm Flange Bolts (4) (Fig. 2).
4. Working from the left side, wrap a Weld Nut Strap (5) around the cross tube behind the driver seat, as shown in Fig. 3, and install the M6 x 16mm Flange Bolts (3) to the weld nuts on the strap (5). Hand tighten. Repeat on the right side.
5. Torque the bolts (4) holding the mount to the base to 8 Nm (0.8 m-kgf, 5.9 ft-lbf) (Fig. 4).
6. Torque the bolts (3) holding the Bar Mount to the Weld Nut Straps (5) to 10 Nm (1.0 kgf-m, 7.4 ft-lbf) (Fig. 4).

Fig. 3

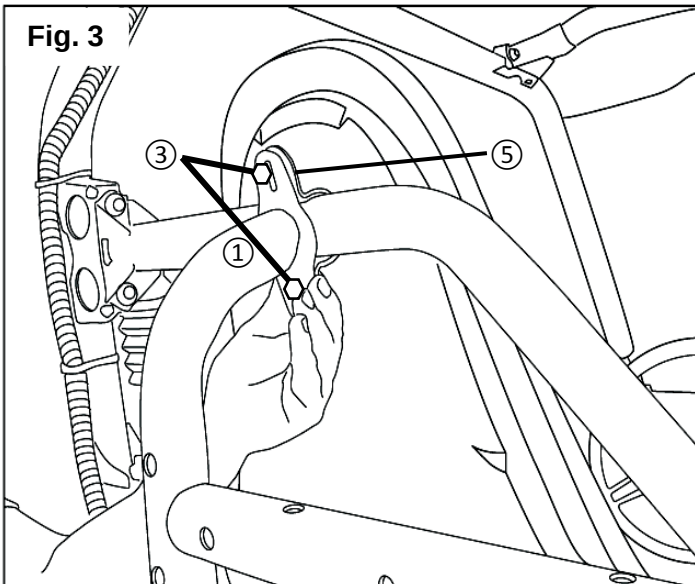

MAINTENANCE:

Periodically, check torque on all hardware. If loose hardware is found, re-torque to specification.

CARE AND CLEANING:

Clean painted metal parts with a clean soft cloth and mild soap and water. Rinse and dry. Clean the windscreen with a clean soft cloth and mild soap and water solution.

CUSTOMER SERVICE:

For further information see your Yamaha dealer.

ESTIMATED TIME TO INSTALL: 0.4 HR

Fig. 4

